


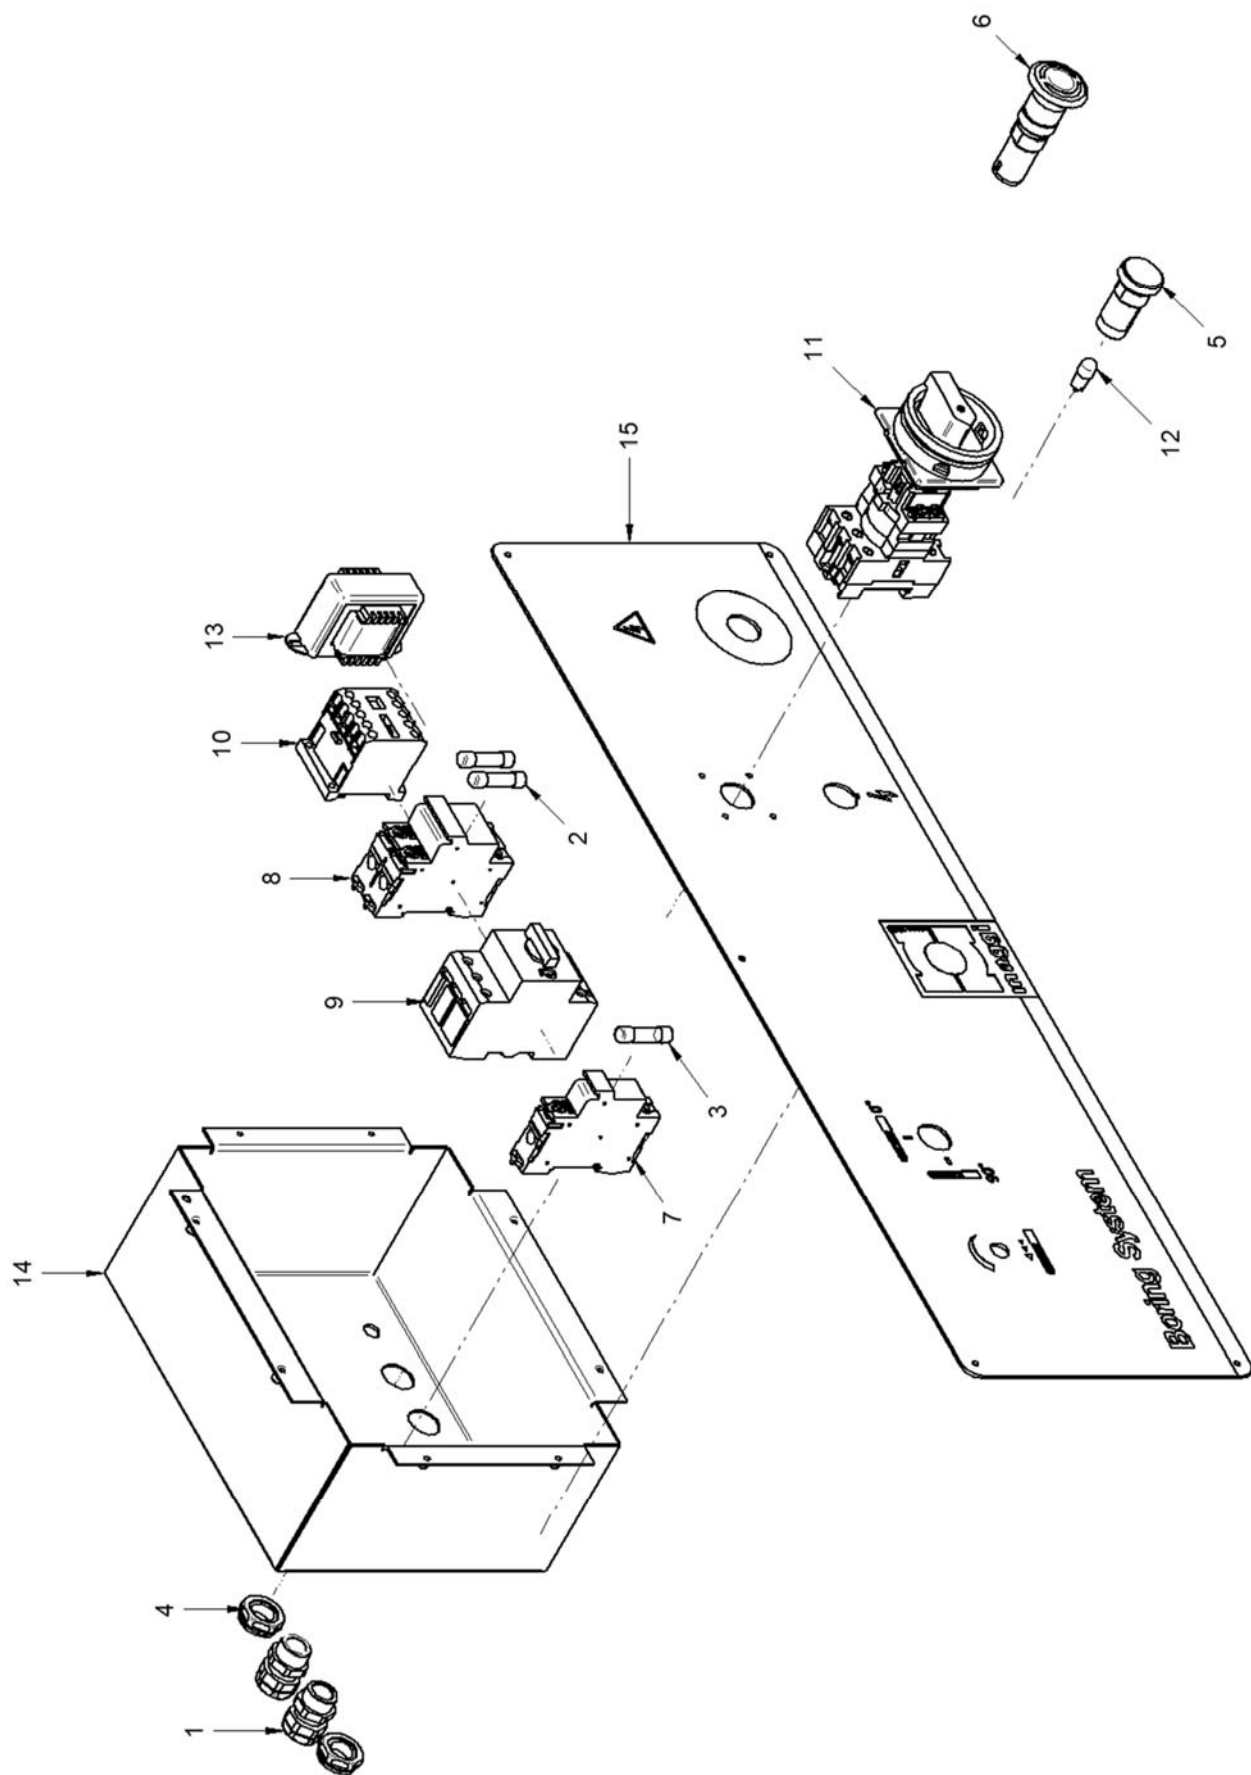

POS.	CODE	PART NAME
1	00001189	GLAND PG 13,5
2	00005082	FUSE 10X38 0,5A
3	00005083	FUSE 10X38 1,0A
4	00005086	TAP PG13,5 + NUT
5	00005320	LAMP HOLDER SCHNEIDER XB7-EV67P
6	00005330	EMERGENCY PUSHBUTTON SCHNEIDER EB7ES542P
7	00005340	FUSE HOLDER WIMEX PS 10-1-S 32A 10X38
8	00005341	FUSE HOLDER WIMEX PS 10-2-S 32A 10X38
9	00005353	POSITION SWITCH EATON_PKZM0-63
10	00005360	CONTACT SWITHC EATON DIL EM-10 XTMC9A10
11	00005370	MAIN SWITCH GIOVENZANA SQ0321003B
12	00005380	LAMP 30V 3W
13	00005390	TRANSFORMER NOR-SE VA15 TA-980015
14	36054033	ELECTRIC BOX
15	36128004	CONTROL PANEL